折后成品尺寸为70*100mm



CHAPTER 1 BRIEF INTRODUCTION 1.1 Appearance





not more than 12.5% or 80-1 density not more than 25.5% or 80-1 density not some source of the s

80mm Thermal Printer User Manual

YES

ASCII:9×17,12×24; Multiple code pages support
UPC-A, UPC-E, EANB, EAN13, CODE39, ITF,
CODEBAR, CODE128, CODE93

QR code
Support bitmap printing with different density and user defined bitmap printing (Max. 40K for per

2600mAh/8.4V rechargeable Li-ion battery Full charge can print 200~250m (printing densit not more than 12.5%) or 80~100mm (printing

bitmap, and Max. 64K for total)

CHAPTER 2 SPECIFICATIONS

rcode Symbologie

Graphics

Detection LED indicator

Charging

1.2 Accessories

反面

CHAPTER 3 OPERATION METHODS

3.1 Preparation Before Using

3.1.1 Li-ion Battery Installation



3.1.2 Paper Loading



3.2 Basic Function

3.2.1 Power On

The printer is power on by pressing the **[POWER]** button lasting for about 3 seconds, and the power indicator is bright in green color.

3.2.2 Power Off

The printer is power off after holding down the 【POWER】 button for about 2 seconds. All the indicators are off when the printer is off 3.2.3 Self-test

The self-lest indicates the printer's current settings, status and whether the printer has any problems. Hold down the <code>IFEED1</code> button while press <code>IFOWER1</code> button about 2 seconds, the self-lest begins. The printer is ready to receive data as soon as it completes self-lest.

3.2.4 Paper Feeding (Manual paper feeding)

Users could use [FEED] button to feed paper manually when printer on normal

3.2.5 Battery Charging

Before the battery runs out of power, the printer will alarm and the green LED indicator will flash slowly. It will power off automatically when continues printing.

indicator will flash slowly. It will power off automatically when continues printing. Charging Methor box: charger to the power connector of the printer. 1) Connect the power charger into an electrical outlet (Printer could be in use when charging). Power-diff Power-on charging: LED light will always indicate green color and will keep on bright when fully charged. MOTE: Please use the original battery and power charger, otherwise printer may be damaged or even cause explosion.

80mm Thermal Printer User Manual

3.3 Toggle between receipts mode and label

3.3.1 Click the feed button on the right side 3 times in a row while it's power on 3.3.2 When switching to label mode After the label is installed, hold down the FEED key for 5 seconds to let the printer learn the length and width of the label. The label can then be printed normally.

3.4 Printer connecting and Printing 3.4.1 Bluetooth pairing and printing

PDA with Bluetooth interface, laptop and other informati thermal printerBT-802. Instructions as follows: 1. Power on printer: 2. Primary device search for outer Bluetooth devices.

- If there are some outer Bluetooth devices, choose BT-802
 Enter password "0000".

3.5 LED Indicator and Buzzer Definition

Definitions of LED indicators and buzzer Definitions
Definitions of LED indicators and buzzers indicate the printer status. The LED indicator 2. There is a buzzer and 3 LED indicator buzzer indicates the change of the printer state. 3 groups of LED indicators are respectively Power. ERROR, STATUS.

1) Startup indicator light: the green light is no long after the printer is started:
2) Blaetooth indicator. After connecting BT, STATUS is on:
3) No paper indicator light: ERROR is on, and the buzzer alarms.
4) Charging indicator light: ERROR is on, and the buzzer alarms.

Welcome to use our printer, thank you!